## 微星 BIOS 设置教程

1、开机不断点击键盘"Delete"键进入主板 BIOS 界面,点击右侧"硬件监控"功能按钮 (不同主板设置方式不一,详情请参考主板厂商官网)



2、选中相应风扇,点击方框关闭智能风扇模式

	26°C/78°F	CPU 1	<b>ふ</b> 系统 1	<b>系</b> 统 2	<b>ふ</b> 系统 3				
☑ 🧷 系统	22°C/71°F	2450RPM	ORPM	1495RPM	1730RPM				
O PWM⊙DC									
		3 洗中相应风扇洗顶卡 关闭智能风扇横式					7000	85°C/185°	
		90/478			<b>NUT BIEF</b>	1/33 1× 1	6300	70°C/158°	
SYS Fan3 step up time									
: 0.1s			4.按	"F10"	保存并退出	H		12.00V	
SYS Fan3 step down time		30/ 86							
: 0.1s		20/ 68		ᡅᢌᡢᡊ᠊ᡊ	᠗ᡊ᠆ᡙᡗ᠕᠆᠕ᢙ	محمحم	1400		
		🖞 (°C) 🖞 (°F)					(RPM)		
					全部全速(	(F)	全部设为默认	(D) 撤销全	部设置(C)
1.232	0.976	1.07	2	5.080		12.288	1.2		
	Ti i	i i			I				
CDUIT A	CDU 1/0	COLLER		Ti litta IEN I	7.14.11.21	_	rb t=	255	

3、按"F10"保存并退出