

## Barrow 影驰 RTX2060/GTX1660 全覆盖显卡冷头安装教程

# 安装教程(实例示范)

INSTALL TUTORIAL (DEMONSTRATION)




1. 拆除图中标红位置螺丝



2. 拆除图中标红位置螺丝



3.清理并重新涂抹导热硅脂

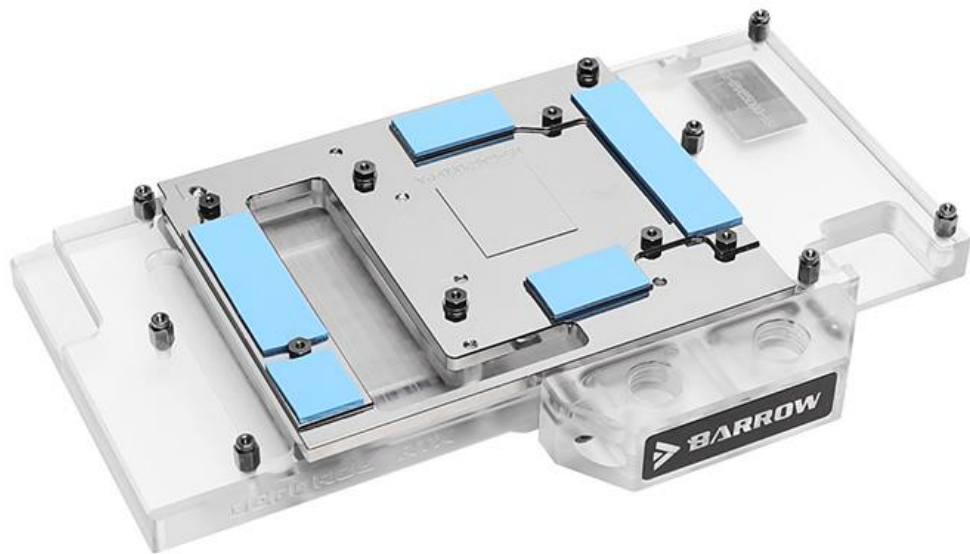


4.在相应位置贴好相应规格导热硅脂条，注意剪切尺寸

# 安装教程(图纸示范)


DEMONSTRATION INSTALLATION TUTORIAL (DRAWING)

## 第一步：原装散热器拆除

THE FIRST STEP: ORIGINAL RADIATOR REMOVED THE FIRST STEP: ORIGINAL RADIATOR REMO

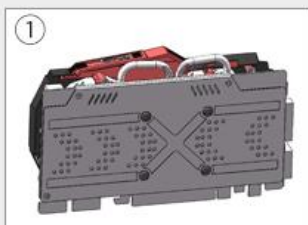

原装显卡

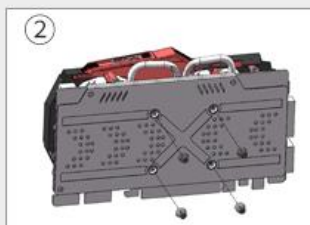


拆除原装显卡背板螺丝




拆除风扇的电源线并分离原装散热器

## 第二步：涂抹硅脂/黏贴硅胶垫


THE FIRST STEP: ORIGINAL RADIATOR REMOVED THE FIRST STEP: ORIGINAL RADIATOR REMOVEDAL RADIAT

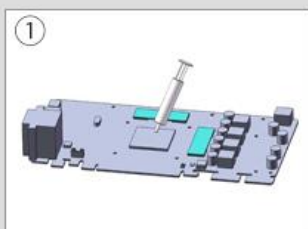

清理原电路板及芯片的残留硅脂并重新涂抹一层薄薄的硅脂

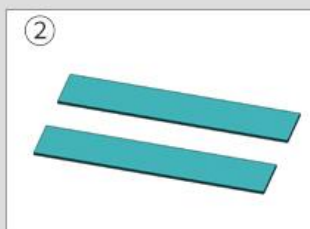


将导热胶垫切为合适的尺寸

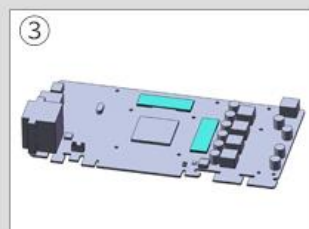


贴在显卡的发热芯片上

## 第三步：安装冷头


THE FIRST STEP: ORIGINAL RADIATOR REMOVED THE FIRST STEP:

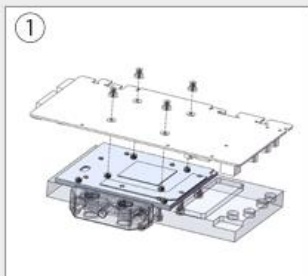

将显卡冷头底板螺丝对准显卡螺丝孔位使两者贴合

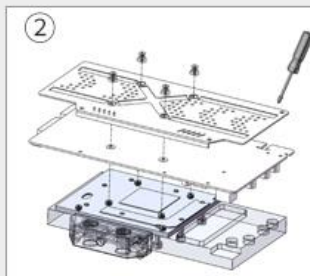

显卡原装背板孔位对准贴合用弹簧螺丝锁紧

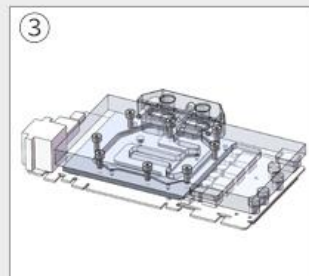

安装完成

\* 注意：如不安装显卡背板，需在安装孔位放置绝缘垫片再用弹簧螺丝锁紧。  
通用版本图纸安装示范教程，具体安装细节有可能根据不同显卡略有不同，以实物为准。